



**Auto Care USA**  
a division of Northwest Equipment Manufacturing, Inc.  
122 East Reserve Dr. • Kalispell, MT 59901 USA  
• Office: 406-755-0805 • Fax: 406-755-0813  
nwEquipmentSales.com



Reach us at: 877-349-2327 or 406-755-0805

## **Turntable Instructions, For both Passenger Car / Light Truck, and Heavy Duty Truck Turntables**

For best results, find a space that is easy to get to and reasonably level, and mark the spaces for each wheel. The plates should be placed in their respective spots and leveled, both crosswise and diagonally.

Each plate and corresponding rectangle should be numbered to save time on future alignment jobs.

When not being used the set is easily stored, freeing the floor space for other uses.

### **Caution**

Locking pins must be engaged when driving a vehicle on or off the passenger car or heavy-duty Truck Turnplates

### **Cleaning/Lubrication**

Turntables, both the passenger car/light truck and the heavy duty truck, must be cleaned periodically as work area conditions dictate. The top plates must be removed, the balls cleaned, the bearing retainers cleaned as well as both the top plates and the bases.

Then after cleaning the parts above, lubricate with a very fine film of motor oil on the machined underside of the top plates and the top of the bases.